


INSIDE PIPE FIT CLEANOUT

PART #	MODEL #	DESCRIPTION	INNER CARTON QTY	MASTER CARTON QTY	SELECT MODEL BELOW
INSIDE PIPE FIT CLEANOUTS					
H60171	HPPFC03	INSIDE PIPE FIT CLEANOUT - 3"	1	8	<input type="checkbox"/>
H60170	HPPFC04	INSIDE PIPE FIT CLEANOUT - 4"	1	6	<input type="checkbox"/>

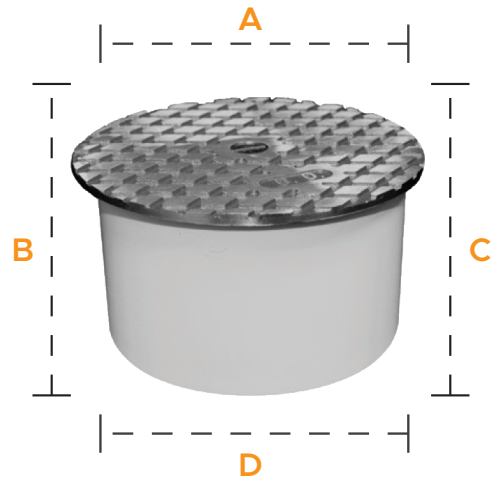

	A	B	C	D
3"	3-1/2"	2-5/8"	2-1/2"	3"
4"	4-1/2"	2-5/8"	2-1/2"	4"



FLOOR APPLICATION INSTRUCTIONS



Pour the concrete around the stub out that remains above the floor level.




Cut the stub out as close to level with the floor as possible.



Use a Socket saver or inside pipe cutter to cut the pipe a 1/4 inch below the floor.



Apply primer and glue to the inside pipe fit cleanout and inside of the pipe. Insert the cleanout.

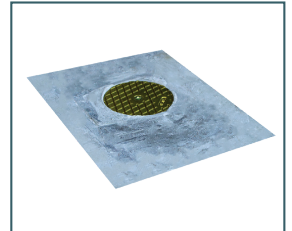

Push cleanout into the pipe until the cover is flush with the floor for a finished look.

- FEATURES:**
- Installs AFTER the Pour
 - Nickle Bronze Cover
 - PVC Construction

JOB NAME: _____

JOB LOCATION: _____

CONTRACTOR: _____ **DATE:** _____

ENGINEER APPROVAL: _____ **DATE:** _____

ITEM TAG: _____

PART NUMBER: _____